

# How to use USB-VCP

**Version 1.0**

**May - 22**

## Table of Contents

Copyright.....	3
Service Information.....	3
Revision History.....	3
Overview.....	4
Operation.....	4

## Copyright

GENERALSCAN reserves the right to make changes to any product to improve reliability, function, or design.

GENERALSCAN does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

## Service Information

If there is a question with the barcode scanner, you can visit website for the live chat at: [www.generalscan.com](http://www.generalscan.com)

## Revision History


Version	Date	Description
1.0	May-22	Initial Release

## Overview

This file is used to introduce how to use the USB-VCP Mode of scanner.

## Operation

Step1: Scan “Default Factory Setting” , after scanning, the blue indicator light will be in quickly flashing status.

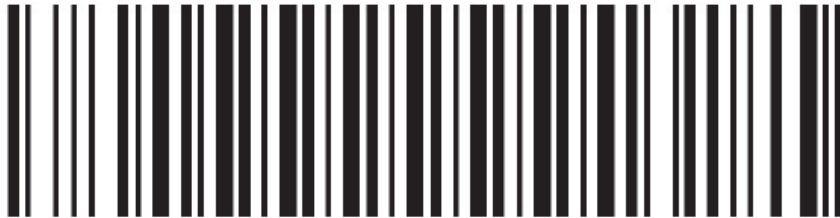

**Default Factory Setting**

Step2: Scan the barcode of USB-VCP Mode, observe the blue indicator light of the scanner goes out.




**USB-VCP Mode**


Step3: Connect the scanner to computer by using Type-C, can hear one long and two short voice, accompany with the green lights goes on and the vibrator vibrates.




Step4: Open Serial Port Utility (This software is used to show, customer can use the software that needs to) .

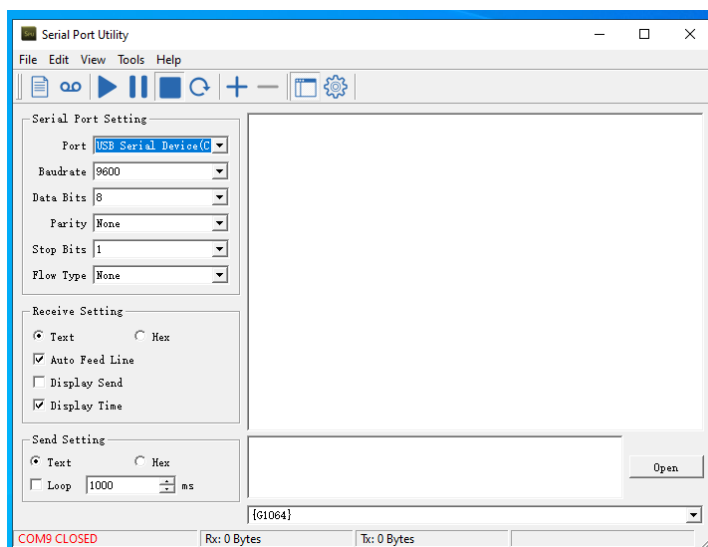

Step5: Choose the serial of scanner connect (This example is COM9, during the fact using it maybe other COM port)

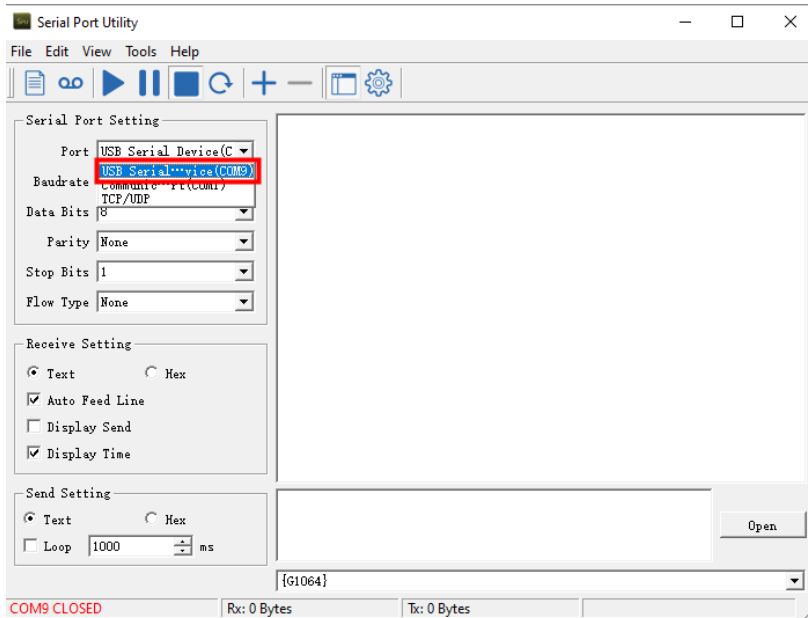

Step6: Open serial

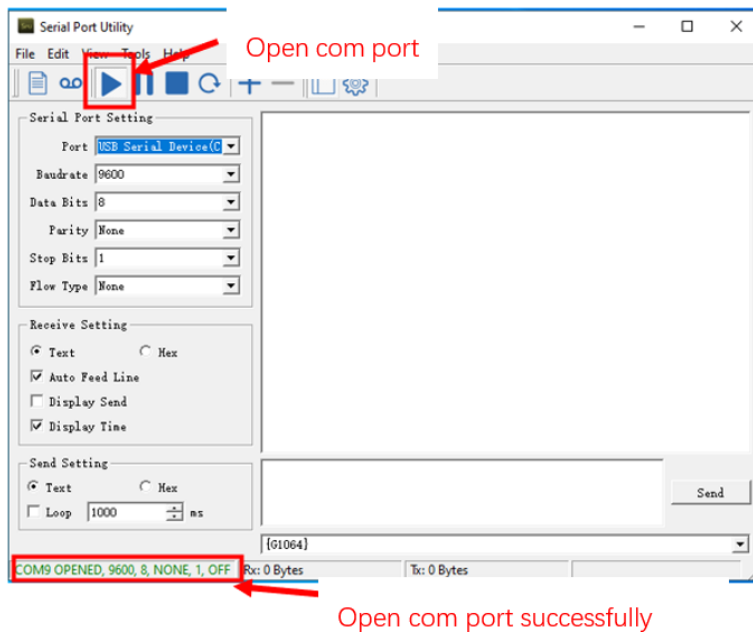

Step7: Scanner scans the barcode, can get information outputting, Also can control the scanner through input order, for example: input {G1064} is the order to read the information of the scanner firmware version.

