

# How to use Offline Storage Mode

**Version 1.0**

**Jun - 22**

## Table of Contents

Copyright.....	3
Service Information.....	3
Revision History.....	3
Overview.....	4
Operation.....	4

## Copyright

GENERALSCAN reserves the right to make changes to any product to improve reliability, function, or design.

GENERALSCAN does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

## Service Information

If there is a question with the barcode scanner, you can visit website for the live chat at: [www.generalscan.com](http://www.generalscan.com)

## Revision History

Version	Date	Description
1.0	Jun-22	Initial Release


## Overview

This file is used to introduce how to use Offline Storage Mode.

NOTE: Since using mainboard to configurate output data, therefore when scan the barcode “Default Factory Setting”, the previous mainboard configuration will be invalid.

## Operation

Step1: Scan “Default Factory Setting” , after scanning, the blue indicator light will be in quickly flashing status.

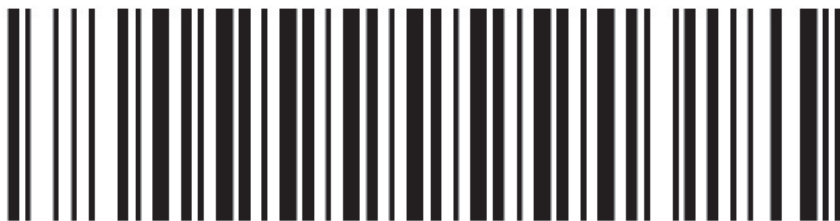

**Default Factory Setting**

Step2: Scan the barcode of Enable Offline Storage Mode, enter offline mode status, scan the barcode at this moment, the information of the barcode will not output to the connected device.



**Enable Offline Storage Mode**

Step3: The barcode that allows to start the scanner. When need to transfer the information of the scanning barcode to the device, can scan anyone of the three barcodes below.



Fast Speed Upload



Middle Speed Upload



Low Speed Upload

Besides, we can read the barcode's quantity that stored offline through scan the barcode below.



Barcode Storage Information

After your data transmission is completed, please scan the following barcode to clear the data in the scanner



Clear Barcode Storage

Step4: When need to quit from the offline mode, please scan the barcode below f



Disable Offline Storage Mode(\*)