


How to configure TriggeringModes

Model GS R3520

Version 1.0

Jan-16-2024

Scan (Level) - A trigger press activates decode processing. Decode processing continues until the barcode decodes, you release the trigger.

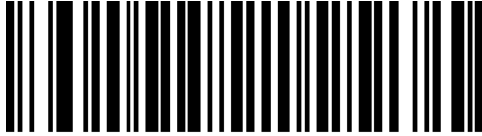

***Standard**

Presentation (Blink) - The engine activates decode processing when it detects a bar code in its field of view. After a period of non-use, the LEDs turn off until the engine senses motion.



Presentation

Auto Aim - The engine projects the aiming pattern when it senses motion. A trigger press activates decode processing. After two seconds of inactivity the aiming pattern shuts off.




Auto Aim

Auto Aim with Illumination - The engine turns on the aiming pattern and internal illumination LEDs when it senses motion. A trigger press activates decode processing. After two seconds of inactivity the aiming pattern and internal illumination LEDs automatically shut off.



Auto Aim with Illumination

Setting it to continuous mode requires disabling the scanner's Sleep Mode
Enabling sleep mode again requires restarting the scanner to be effective.

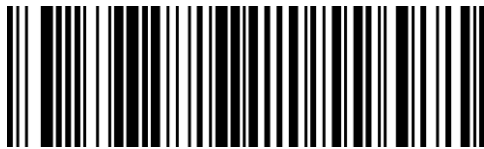

***Enable Sleep Mode**



Disable Sleep Mode