

How to connect with Bluetooth SPP

Version 1.0

May - 22

Table of Contents

Copyright.....	3
Service Information.....	3
Revision History.....	3
Overview.....	4
Download.....	4
Operation.....	5

Copyright

GENERALSCAN reserves the right to make changes to any product to improve reliability, function, or design.

GENERALSCAN does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

Service Information

If there is a question with the barcode scanner, you can visit website for the live chat at: www.generalscan.com

Revision History

Version	Date	Description
1.0	May-22	Initial Release


Overview

This file is used to introduce how to use Bluetooth SPP mode of scanner to connect with device. Bluetooth SPP can't be used in IOS system.

Video: <https://youtu.be/0mWJSX-DFLk>


Download

The APP which is mentioned in the file, can search “generalscan sdk demo” in Google play, choose the program which is in red box to download and install.

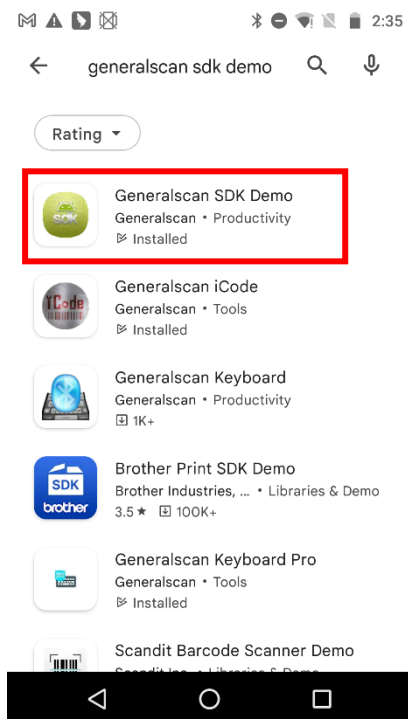

Operation

Step1: Scan “Default Factory Setting”, after scanning, the blue indicator light will be in quickly flashing status.

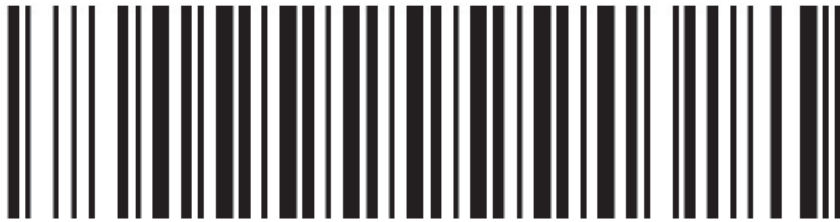


Default Factory Setting

Step2: Scan the barcode of “Bluetooth SPP Mode”, observe the blue indicator light of the scanner is in slowly flashing status




Bluetooth SPP Mode


Step3: Open the "Settings" of mobile phone.

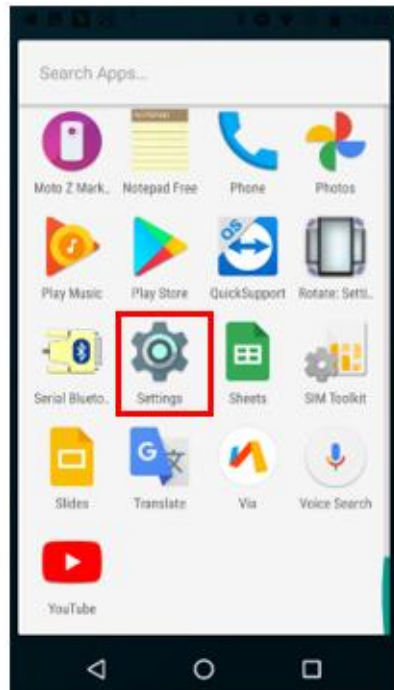


Step4: Choose "Bluetooth"

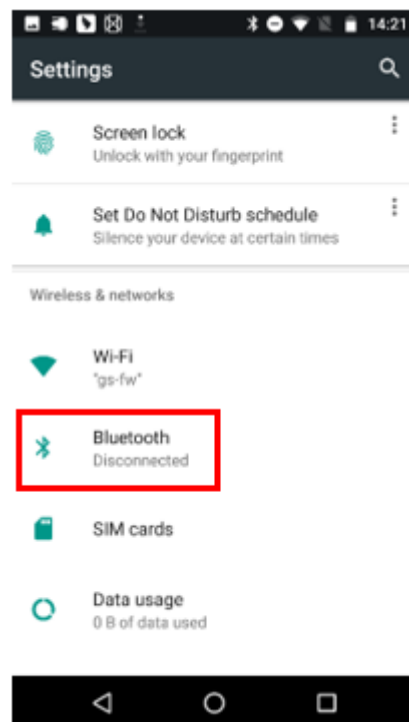


Step5: Choose scanner connection.

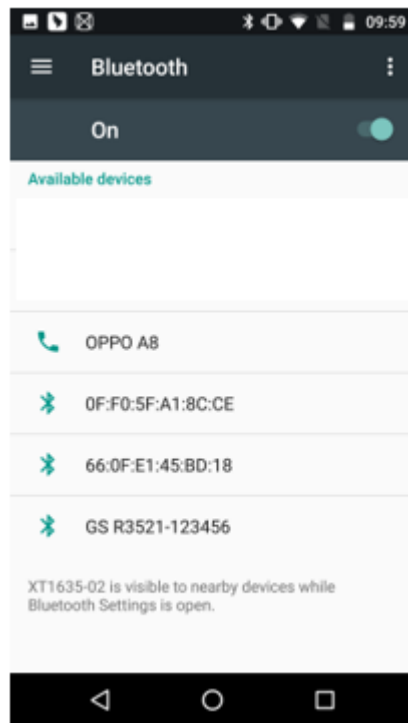

Step6: Input password 1234

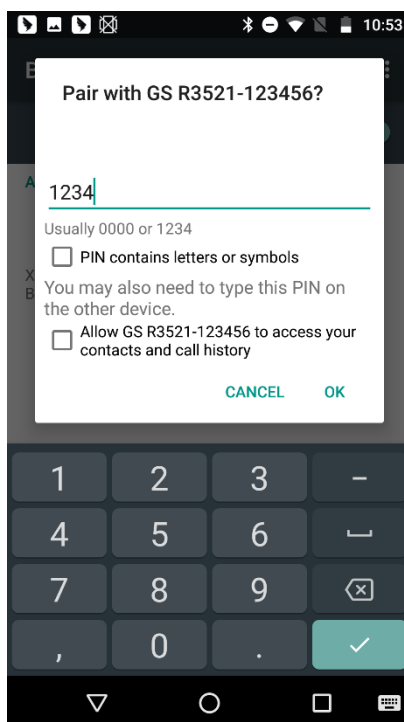


Step7: Scanner pairs successfully.

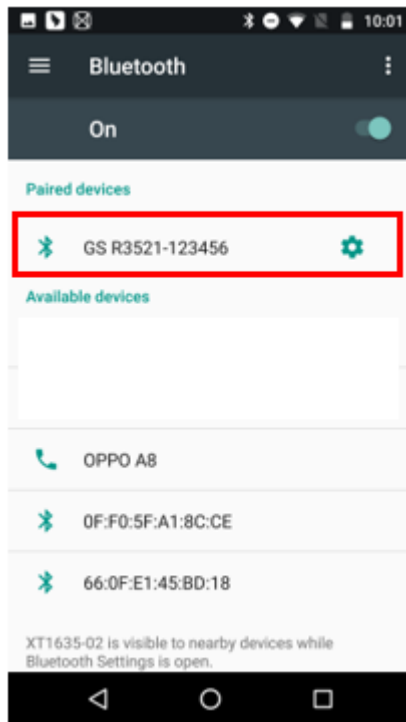

Step8: Open Generalscan SDK (this APP just be used to show, customer can use own serial APP)



Step9: Click the "Select device" that one the right upper corner of the software interface, and then choose the scanner that need to be connected.

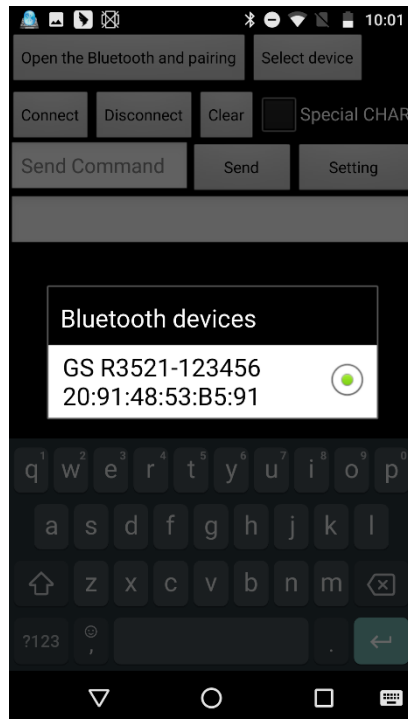

Step10: Click "Connect", this moment the blue indicator light of scanner goes out, scan the barcode can get output data. Also can control scanner through sending order. For example, send {G1065} to read device ID of scanner.

