

How to use the Mainboard to set prefix and suffix

Version 1.0

Jun - 22

Table of Contents

Copyright.....	3
Service Information.....	3
Revision History.....	3
Overview.....	4
Operation.....	4
Add prefix.....	5
Add suffix.....	6

Copyright

GENERALSCAN reserves the right to make changes to any product to improve reliability, function, or design.

GENERALSCAN does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

Service Information

If there is a question with the barcode scanner, you can visit website for the live chat at: www.generalscan.com

Revision History

Version	Date	Description
1.0	Jun-22	Initial Release

Overview

This file is used to introduce how to use the mainboard to configurate the prefix and suffix of the output data.


NOTE: Since using mainboard to configurate the prefix and suffix, therefor when scan the barcode of “Default Factory Setting”, the previous mainboard configuration will be invalid.

Operation

This is the URL link to generate the barcode


<https://www.generalscan.net:8443/H5/CustomBarcode/>

Step1: Scan “Default Factory Setting” , after scanning, the blue indicator light will be in quickly flashing status.

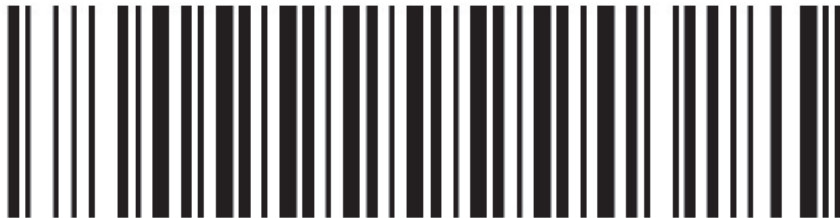


Default Factory Setting

Add prefix

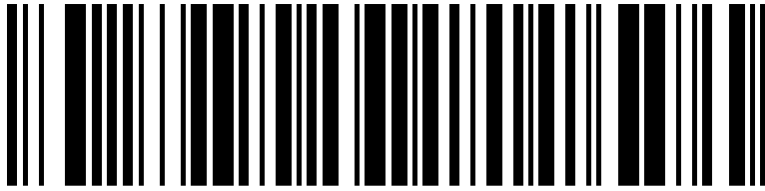


{G2042/1/}

e.g.: Need to add prefix A, please scan the barcode below

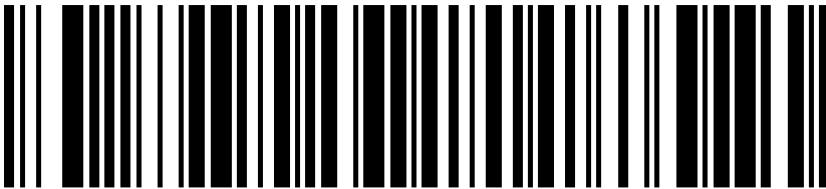


{G2042/1/A}


Outputting that before adding the prefix

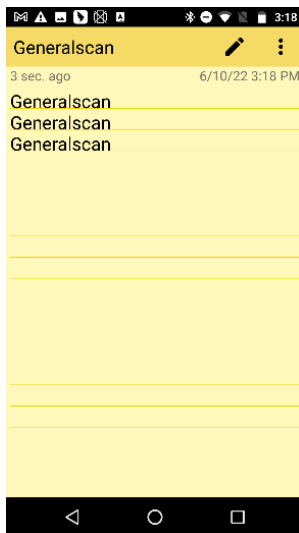

outputting that after adding the prefix

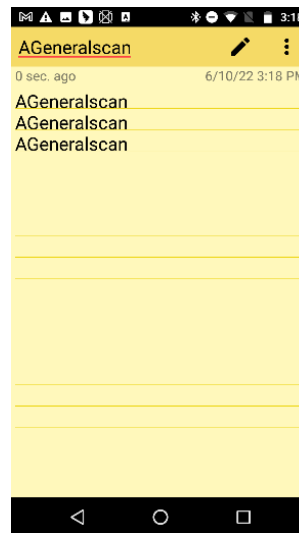


Add suffix

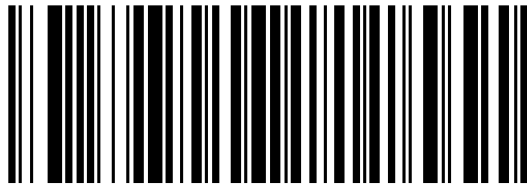

{G2043/1/}

e.g.:

Need to add suffix AB, but at the same time keep the “Enter” changing line, please scan the barcode below.

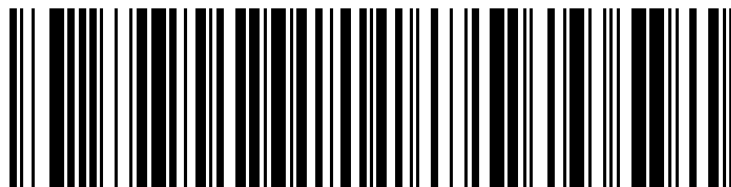

{G2043/1/AB}


The edit contents of the upper barcode is

```
[G2043/1/AB CR LF ]
```


, CR and LF mean

“Enter” changes line.


Before adding suffix

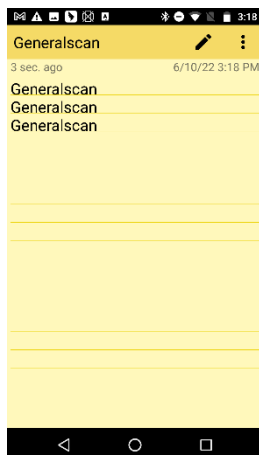

After adding suffix

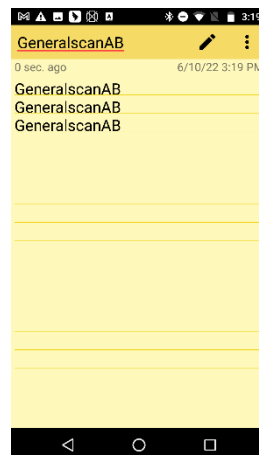

Need to add suffix AB, but don't need to "Enter" changes line, please scan the barcode below.

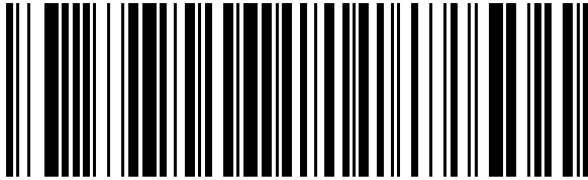


{G2043/1/AB}

The edit contents of the upper barcode is

{G2043/1/AB}

Before adding suffix

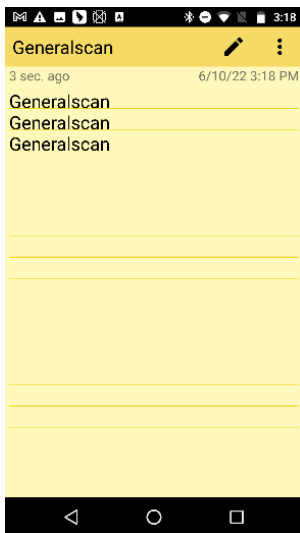

After adding suffix

