
# GENERALSCAN QUICK USER GUIDE FOR WEARABLE BLUETOOTH SCANNERS

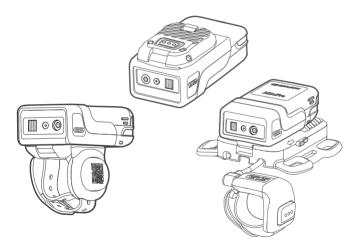



R1120/R152#/R352#/R552#

Ring Scanner / Thumbutton Scanner / Ruglove Scanner

### Introduction


This Guide is applicable to all GS Wearable Scanners. For detailed information please refer to this guide. If there are any further questions, please contact support@generalscan.cloud.

# Copyright

GENERALSCAN trademarks are registered in many countries around the world. Generalscan Inc. and/or its subsidiaries, all rights reserved. No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, without permission in writing. The material in this manual is subject to change without notice. All software without license shall not be transferred to others.

## Laser Safety


Do not stare into the laser beam or view directly with optical instruments.



# Battery Safety

- •Do not immerse or expose to water or other liquids, or expose to fire, explosion, or other hazard.
- •Do not disassemble or open, crush, bend or deform, puncture, or shred.
- •Do not short circuit a battery or allow metallic or conductive objects to contact the battery terminals.
- •Do not use the battery if it is bulging, deformed or damaged.
- •To charge the mobile device battery, the battery and charger temperatures must be between +32 °F and +104 °F (0 °C and +40 °C).
- •Do not use batteries other than those provided by GENERALSCAN, otherwise we will not be responsible for the consequences.
- •Dispose of batteries according to instructions.
- •Please follow local regulations to promptly dispose of used rechargeable batteries.


# GS R1120 & GS R152# Ring Scanners

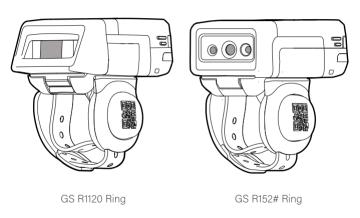


# GS R352# & GS R552# Ring Scanners




## GS R1120 & GS R152# Thumbutton Scanners

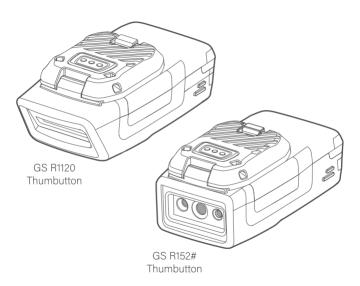


## GS R352# & GS R552# Thumbutton Scanners

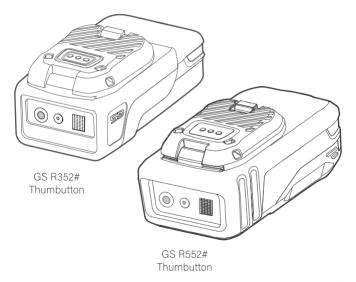


# GS R1120 & GS R152# Ruglove Scanners

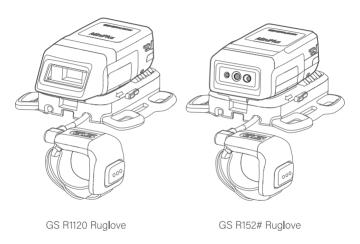

## GS R352# & GS R552# Ruglove Scanners

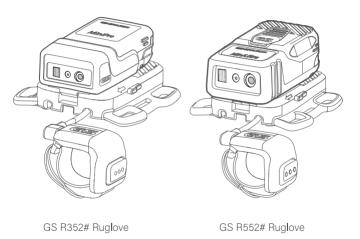

## Ring Scanner Side View

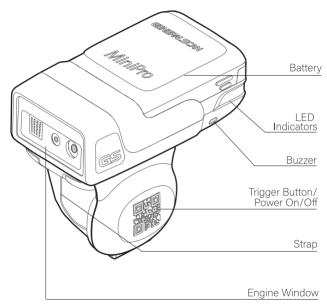

## Ring Scanner Back View

#### Turn ON/OFF

Turn ON the scanner after pressing and holding scanner's trigger button for 1.5 seconds. Turn OFF the scanner after pressing and holding scanner's trigger button for 5 seconds.



## Ring Scanner Setup - Descriptions

#### Figure 1 Install the Trigger

Determine whether ring scanner is used on the right or left hand and rotate the trigger assembly accordingly, so that the Trigger is positioned next to the thumb when ring scanner is placed on the index finger. Align one end of the Trigger on ring scanner.

#### Figure 2 Assemble the Trigger

Push the other end down until it snaps into place.


#### Removing the Trigger

Push the yellow latch in, while lifting the Trigger away from the scanner body.


Note: All steps are applicable to every GS Ring Scanners.

# Ring Scanner Setup


Figure 1

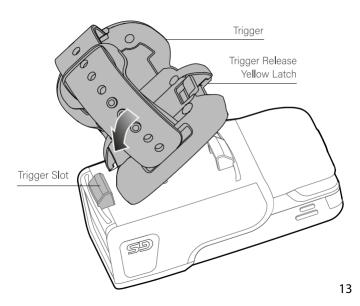

## Ring Scanner Setup

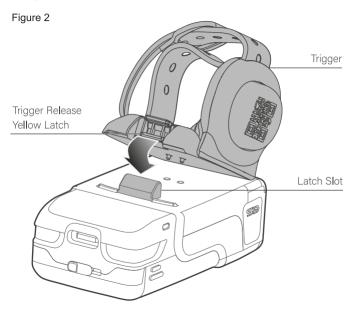

### Thumbutton Scanner Side View

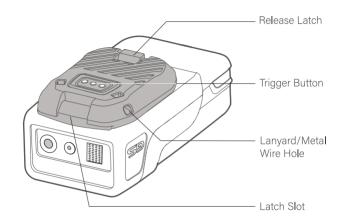


## Thumbutton Accessories

- \* Adjustable Metal Wire
- \* Lanyard


## **Thumbutton Scanner Setup**

Insert the tabs on the Thumbutton into the gaps.

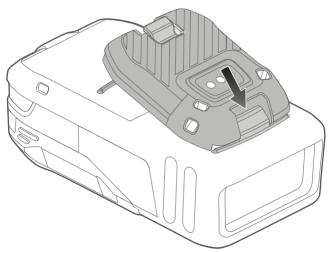


## Thumbutton Scanner Setup

Place the Thumbutton latch into the compartment.

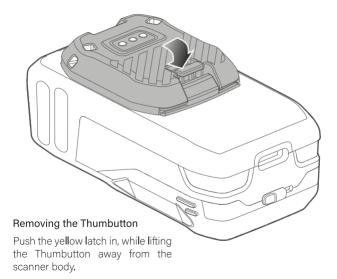

## Ruglove Top and Back View


Top View

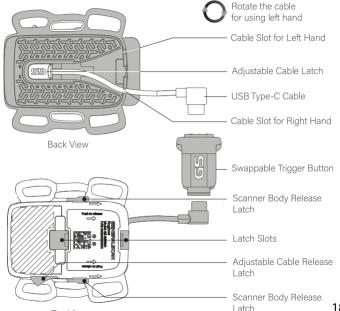

18

## Ruglove Scanner Setup

- ① Insert the tabs on the Scanner Body into the gaps.
- 2 Place the Scanner Body latch into the compartment.

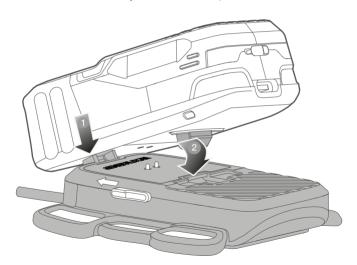


## Ruglove Trigger Button Setup

Connect the trigger button to Ruglove with USB Type-C, compatible with Left and Right hand wearing habits.




## **Battery Setup**

Insert the tabs on the battery into the gaps.

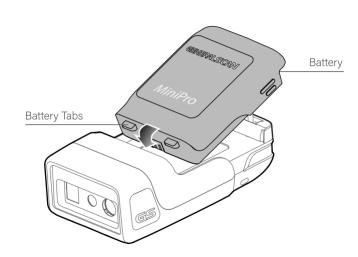

## **Battery Setup**

Place the battery in the battery compartment

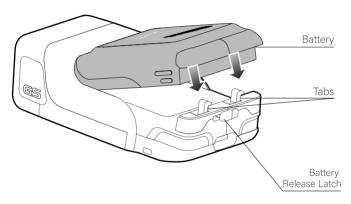


#### Removing the Battery

To remove the battery, please push the release latch on the back of the scanner to the left, then remove the battery with the tabs on the right and left of the battery.


## **Battery Charging**


Please use the cable packed in the box. Place the battery in the charger as follows. Align end of the battery-① on the charger. Pull out the retractor-②. Push the other End-③ into the compartment. Then connect the charger to the computer.

Note: In addition, the scanners can be charged directly with a 5V power source with the USB Type-C cable in the package.

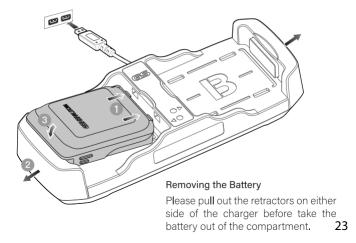

# **Optional Accessories**





#### Standard package content


- 1. Battery 3. USB Type-C Cable
- 2. Strap 4. Battery Charger

## **LED Status**

Status	Description
Green LED blinks one time	Decode successfully
Green LED is blinking continuously	Low battery alarm
Red LED turns on	Charging
Red LED turns off	Charging 100%
Blue LED is blinking continuously	Start Bluetooth pairing
Blue LED turns off	Bluetooth pairing successfully

## Scanning Techniques

Please aim at the middle of the barcode through the red light when scan the barcode. Please scan properly in accordance with the following diagram. Adjust the scanner angle and distance slowly, at the same time, press the trigger button, make the center red light cover the left to right of the barcode.

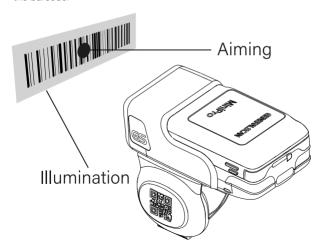

## **GENERALSCAN Applications**

GENERALSCAN is always with you with our after-sales team! G-Service, Generalscan Keyboard Pro are mobile applications that assist you after-sales. Scan the QR code below and make full use of the unique service.







G-SERVICE

iCode GS Keyboard Pro

### More Language

This Guide is written in English. Please scan below barcodes with your phone to get access to other languages.



中文

文 Português

guês Français

Türkçe

irkçe English



#### Warranty Information

For Generalscan products warranty information, please visit www.generalscan.com/warranty.



#### Service Information

If there is any problem of GENERALSCAN barcode scanners, please visit our service page, www.generalscan.com/service.

## **GENERALSCAN**

QUICK USER GUIDE
FOR WEARABLE BLUETOOTH SCANNERS

Email: Support@general scan. cloud

©2022 GENERALSCAN All rights reserved.

Version 2.0



886782995001